

Screenwood Panels are prefinished and assembled prior to delivery. As they are made to order, special requirements such as curves and finished edges can be addressed during manufacture. Please review this guide prior to ordering to ensure all considerations have been made.



Order and Production Process

1. Submit plans or panel list

Send through your project plans for take-offs or a list of panels and required lengths. We prepare quotes based on the plans or quantities provided.

2. Confirm special requirements

Advise if any Start and or Finish panels or Curved panels are required. Note: Additional charges apply for these options.

3. Quote review

Carefully check all measurements and details on your quote are correct before proceeding.

4. Placing an order

Once you're ready to proceed, confirm the order. We will issue a 33% deposit invoice for payment.

5. Deposit and preproduction

Upon receipt of deposit payment, your project moves into our pre-production queue.

6. Carrier rail setout for approval

Our team will work out the carrier rail setout for approval. Custom setouts are included at no additional charge.

7. Carrier rail setout confirmation


You'll receive an email confirming the carrier rail setout. Please review and confirm in writing that all details are correct. Once written confirmation is received, your project passed on to our production team.

8. Production and final payment

When production has completed your order, we'll issue your final invoice. The order is released for delivery or collection once the final payment has been received in full.

Panels MR, Panels FR and Panels Solid Timber

Figure 1. Standard Carrier Rail Setout

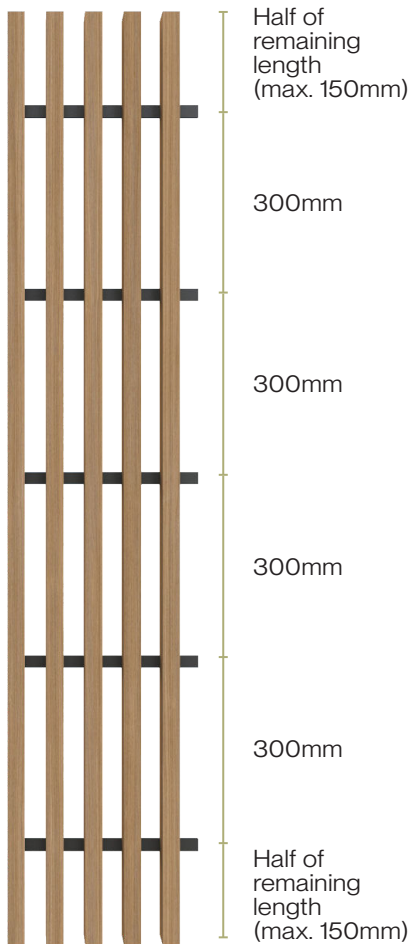

Carrier Rail Setout

Standard Carrier Rail Setouts

Screenwood Panels come with a standard carrier rail setout of 300mm centers and half the remaining length (max. 150mm) on either end. Refer to Fig. 1.

Custom Carrier Rail Setout

If this standard carrier rail set out doesn't work with the setout of furring channel or battens, please let us know on placement of the order and we can customise these prior to production.

Curved Panels

Relief cuts can be added to the brackets prior to manufacture. This modification enables Panels to be manipulated to a radius onsite. Relief cuts are placed behind the timber battens in the black brackets so are not visible from the front face. The maximum radius will be influenced by the profile chosen, and number of battens per panel. Surcharge applies. Refer to Fig. 2.

Start and Finish Panels

Start and Finish Panels have modified batten ends to hide the carrier rail on either the first or the last batten. Surcharge applies. Refer to Fig. 3.

Figure 3. Start and Finish Panels

Figure 2. Curved Panels

